

# SeaEra QC Toilet

Series QC, Model 162 (manufactured after December 2021)

## Installation and Maintenance Instructions

THE FOLLOWING ARE CAUTIONARY STATEMENTS THAT MUST BE READ AND FOLLOWED DURING INSTALLATION, MAINTENANCE AND OPERATION.

**WARNING:** *Raritan Engineering Company, Inc. recommends that a qualified person or electrician install this product. Equipment damage, injury to personnel or death could result from improper installation. Raritan Engineering Company, Inc. accepts no responsibility or liability for damage to equipment, injury or death to personnel that may result from improper installation or operation of this product.*



**WARNING: HAZARD OF SHOCK OR FIRE**

Always use recommended fuse, circuit breaker and wire size.



Motors used with this product are “Ignition Protected”. They are not however, explosion-proof.

**DO NOT** run continuously for more than 30 seconds.

**WARNING: HAZARD OF FLOODING** - Always shut off seacock(s) before leaving the boat unattended.



Double clamp all below waterline hose fittings and check frequently for integrity.

### Description:

SeaEra toilet is available in 12 VDC, 24 VDC and 120/240 VAC. Toilets are available in two sizes, standard or household.

### Water Source Options:

**Fresh Water Model** uses pressurize onboard fresh water.

**Raw Water Pump Model** uses a remote intake pump to supply raw (outside) water to the bowl.

**Sea/Fresh Model** can switch between fresh and raw water source.

### Flush Control Options:

**Smart Toilet Control (STC):** Provides timed operation and independent control of water and discharge.

#### Multifunction Flush Panel


**221600 (White) or 221600B (Black):** Provides momentary operation and independent momentary control of water fill and discharge.

**Momentary Flush Switch (PRS):** Providing only the ability to flush with no independent control of water or discharge.


#### Bluetooth Flush Control (STCBL):

Provides timed operation and independent control wirelessly up to 50' away. Eliminates the need to route wires through bulkheads and cabinetry.

### Pressurized Fresh Water Model

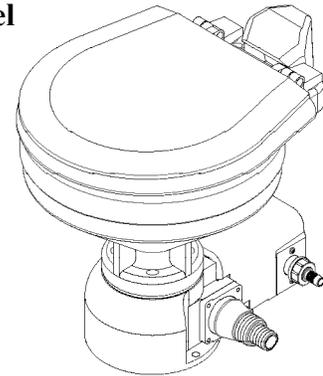

### Remote Raw Water Pump Model

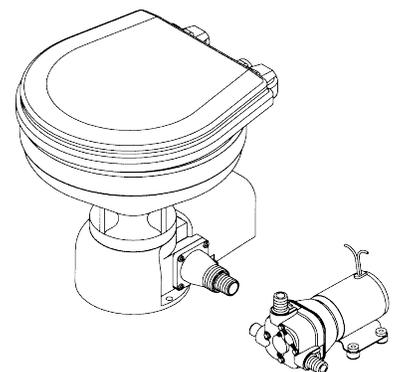

856-825-4900

www.raritaneng.com

**IMPORTANT SAFETY INSTRUCTIONS:****Below-Waterline Installation Requirements**

Toilets installed at or below the vessel's waterline and equipped with an overboard discharge option must have a properly installed vented loop in the discharge line. The vented loop must be installed in accordance with the vented loop manufacturer's installation instructions.

**Raw Water Intake Systems**

Units installed below the waterline and equipped with a remote raw water pump must also have a vented loop installed in the intake line between the discharge side of the raw water pump and the toilet bowl inlet connection. Double clamp all below waterline connections.

Always replace circuit breaker and fuses with same rating. Use Raritan parts to maintain ignition protection requirements.

**WARNING:**

Young children should NOT be left unsupervised around toilet. Serious injury or death could occur. DO NOT place hands in toilet bowl without disconnecting power. A sharp blade is used for maceration of waste. Children can drown in water retained in the bowl. Seat and/or lid could close and strike child.

**Install the Warning Label (L322)  
where it can be easily seen.**

**FLUSH GUIDELINES****DO Flush**

Human Waste and Toilet Paper

**DO NOT Flush**

Feminine Products, Paper Towels, Wet Wipes or Trash

**Raritan recommends:**

- Kills Odor (K.O.) for holding tank treatment
- Cleans Potties (C.P.) for ceramic bowl cleaning
- Mild soap and water solution to clean all other components

**DO NOT:** use general purpose cleaners or other harsh chemicals. Damage to toilet may occur and void warranty.



L110 1225jc

- No special toilet paper is required.
- Water should appear in the bowl within ten seconds. If not, see troubleshooting section.
- Do not flush feminine products, paper towels, wet wipes or trash.
- Always shut off seacock(s) before leaving the boat unattended.

**CLEANING**

Raritan C.P. (1PCP32) - Cleans Potties, a bio-enzymatic bowl cleaner, will keep the bowl clean and fresh smelling. It is the only factory-recognized cleaning product that may be used in the toilet. A mild soap and water solution can be used for all other components.

**DO NOT ADD ANY OTHER CHEMICALS OR CLEANING PRODUCTS TO THE TOILET OR THE TREATMENT SYSTEM.**

**Recommend Visual Inspection**

- ✓ No leaks at toilet and hose connections
- ✓ Hose clamps
- ✓ Condition of hoses
- ✓ Seacocks
- ✓ Condition of wires and connections
- ✓ In-Line Strainer (if installed)

## SYSTEM START-UP

1. Open seacock(s).

**NOTE:** Pressurized fresh water models; open water source valve.

2. Turn on power to toilet.
3. Flush toilet per Operation Instructions included with flush control.
4. Check for leaks.

**IMPORTANT:** If toilet does not flush properly or if water does not enter the bowl within 10 seconds, refer to Troubleshooting.

## WINTERIZING

- Improper winter lay up is a major cause of marine toilet failure.
- Use only nontoxic antifreeze.
- Flush toilet several times to clear waste from system.
- Dispose of all antifreeze in accordance with local and federal regulations.
- Winterize holding tanks, plumbing, treatment systems (MSD's), etc. independently following manufacturer's instructions.

### Winterizing Pressurized Fresh Water Models

#### Parts Required

- 1" [25 mm] or 1 1/2" [38 mm] I.D. discharge hose, approximately 3 feet [1 m] long
- Two buckets
- Nontoxic antifreeze approximately 1 quart [1 L]

#### Steps

1. Close discharge seacock (if one exists).
2. Shut off intake water at source.
3. Turn off power to unit.
4. Disconnect and drain intake and discharge hose.
5. Disconnect intake hoses from toilet and place in one of the buckets.
6. Connect short hose to toilet's discharge and place in other bucket.
7. Pour antifreeze in bowl.
8. Turn on power to unit and flush until antifreeze is removed from the bowl and water is drained from the solenoid and hose.
9. Disconnect power to toilet.
10. Reconnect intake hoses to water solenoid.

### Winterizing Remote Raw Water Models

#### Parts Required

- 3/4" [19 mm] I.D. intake hose approximately 3 feet [1 m] long.
- 1" [25 mm] or 1 1/2" [38 mm] I.D. discharge hose approximately 3 feet [1 m] long.
- Two buckets
- Nontoxic antifreeze approximately 1 quart [1 L]


#### Steps

1. Close the intake and discharge seacocks.
2. Turn off power to unit.
3. Disconnect and drain pump intake hose and discharge hose.
4. Connect short hoses to toilet's pump intake and discharge.
5. Place one bucket under hose connected to toilet's discharge.
6. Pour nontoxic antifreeze in other bucket.
7. Place hose connected to intake pump into bucket with antifreeze.
8. Turn on power to unit and flush toilet until antifreeze begins to be discharged from toilet.
9. Disconnect power from toilet.

## RECOMMISSIONING

1. Using the buckets, hoses and approximately 1 gallon [3.8 L] of clean fresh water, flush antifreeze out of the toilet (see Winterizing). Dispose of antifreeze in accordance with local and federal regulations.
2. Reconnect the intake and discharge hoses and open both seacocks and water source valve.
3. Check all connections for leaks with several test flushes.

## Pressurized Freshwater or Remote Raw Water Pump

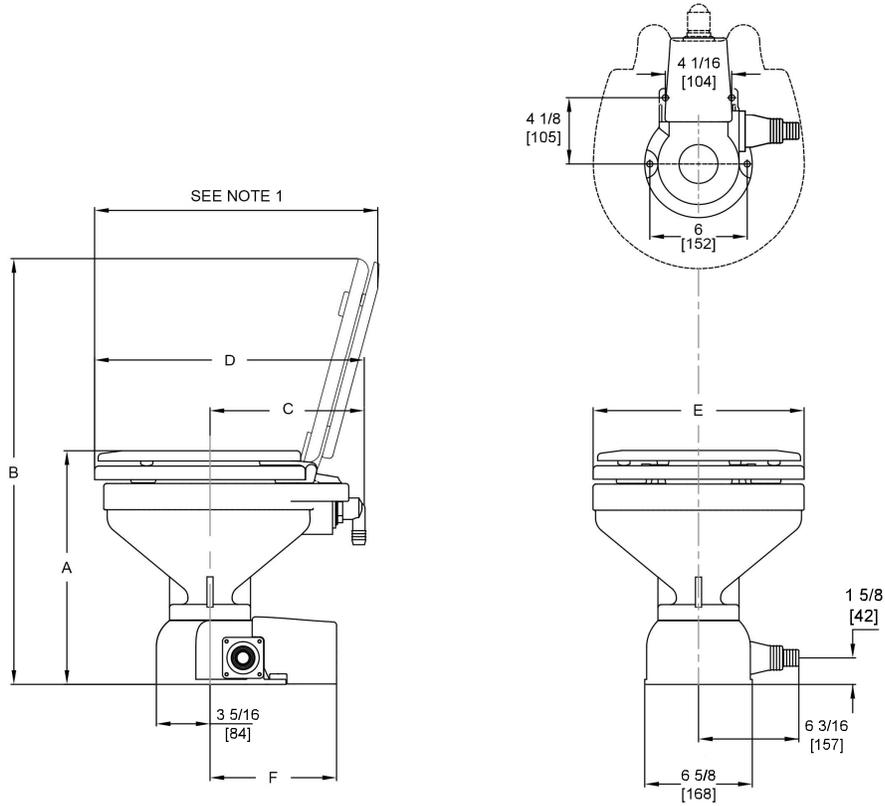


BOWL TYPE	A	B	C	D	E	INTAKE	F
MARINE	14 1/2 [368]	26 1/2 [673]	10 3/8 [264]	17 1/4 [438]	13 [330]	PRESSURIZED FRESH WATER	8 7/8 [225]
HOUSEHOLD	14 7/8 [378]	29 5/8 [752]	11 1/2 [292]	20 [508]	14 3/8 [365]	REMOTE PUMP	7 13/16 [199]

INCHES  
[mm]

**NOTE:**

1. THE SEAT WILL OPEN WITHIN THE DEPTH OF THE BOWL (D), HOWEVER, IT MAY BE DESIRABLE TO INCREASE THIS ANGLE BY ALLOWING MORE ROOM AT THE BACK OF THE BOWL FOR THE SEAT TO OPEN.
2. DIMENSIONS ARE FOR REFERENCE AS VITREOUS CHINA DIMENSIONS MAY VARY +/- 5%.

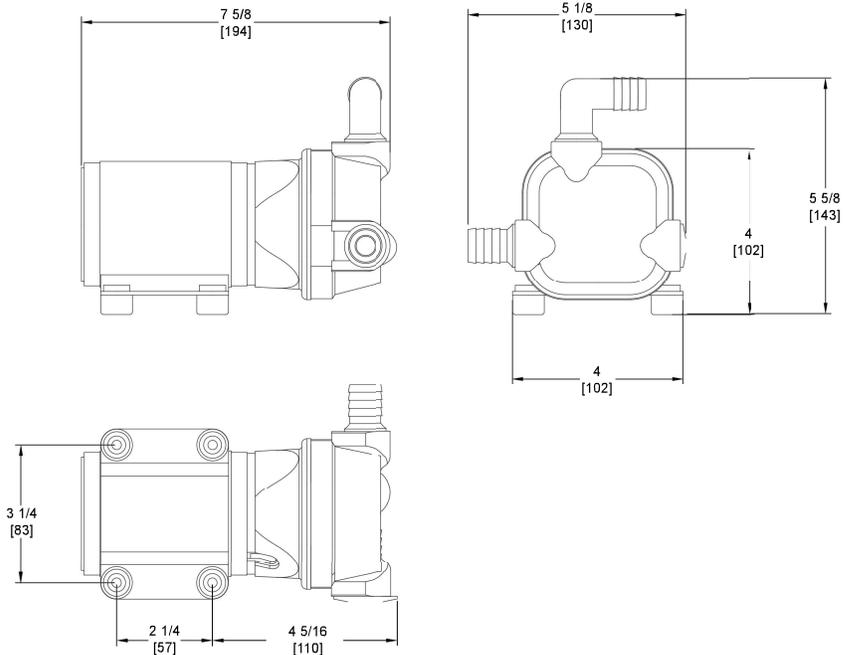

**Plumbing**

Maximum suction of Intake pump (Maximum height above waterline)	4' [1.2 m] from Intake Pump.
Maximum height of discharge vented loop	6' [1.8 m] from base of toilet.
Pressurized water source requirements	Minimum flow rate of 3.5 gpm [13.25 L] at 10 psi [70 kPa] shutoff pressure of 5 psi [34.5 kPa]

**NOTES: for Wiring**

1.	Distances are from source to unit and back to source.
2.	Distance from power source to remote intake pump MUST be included when determining total distance.
3.	Recommended conductor wire minimum AWG (mm <sup>2</sup> ) for 3% voltage drop.
4.	Recommended conductor sizes are based on 105°C rated insulation. Refer to ABYC Standards for other insulation ratings.
5.	For 120/240 VAC units use 12VDC specifications from transformer to unit.

**CONVERSIONS**

**Wire - AWG to mm<sup>2</sup>**

AWG	16	14	12	10	8	6	4	2
mm <sup>2</sup>	1.5	2.5	4.0	6.0	10.0	16.0	25.0	35.0

**Feet to Meters**

Feet	10	15	20	25	30	40	50
Meter	3.1	4.6	6.1	7.6	9.2	12.2	15.2

**Wiring Controls: Follow the instructions included with flush control.**

Always replace circuit breaker and fuses with same rating.

Use Raritan parts to maintain ignition protection requirements.

**Recommended Wire and Circuit Breaker/Fuse Sizes**

**Raw Water Models (sizes based on both remote intake and discharge pumps amp added together)**

Units Voltage	Circuit Breaker/fuse size (amps)	Toilet Discharge Pump Amp draw	Remote Intake Pump Amp draw	10 feet	15 feet	20 feet	30 feet	40 feet	50 feet
12 VDC	25	13	10	10 AWG	8 AWG	6 AWG	6 AWG	4 AWG	4 AWG
24 VDC	15	7.5	5	16 AWG	14 AWG	12 AWG	10 AWG	10 AWG	8 AWG

**Pressurized Fresh Water Model**

Units Voltage	Circuit Breaker/fuse size (amps)	Amp. draw	10 feet	15 feet	20 feet	30 feet	40 feet	50 feet
12 VDC	25	13	12 AWG	10 AWG	10 AWG	8 AWG	6 AWG	6 AWG
24 VDC	15	7.5	16 AWG	16 AWG	14 AWG	12 AWG	10 AWG	10 AWG

**Remote Intake Pump Only (Raw Water and Sea/Fresh Models)**

Units Voltage	Circuit Breaker/fuse size (amps)	Amp. draw	10 feet	15 feet	20 feet	30 feet	40 feet	50 feet
12 VDC	15	10	14 AWG	12 AWG	10 AWG	10 AWG	8 AWG	6 AWG
24 VDC	10	5	16 AWG	16 AWG	16 AWG	16 AWG	14 AWG	12 AWG

## Parts Included

### All Complete Toilets

Toilet bowl, seat and cover  
 Lower base assembly, motor cover  
 Straight Discharge, installed  
 1 1/2" [38 mm] 90° Discharge Fitting  
 Adapter, 1" FPT x Barb  
 Flush Control

### Remote Raw Water Model

Intake Pump  
 3/4" [19 mm] Hose Barb - straight fitting (2)  
 3/4" [19 mm] Hose Barb - 90° fitting (2)  
 Plug Fitting

### 90° Rotation of Toilet Bowl

Toilet bowl can be rotated 90° on the base, for installing in confined locations (FIG 1).

**NOTE: Rotating bowl may require a longer length of hose.**

1. Determine which direction bowl is to be mounted.
2. Remove four vinyl caps at the base of toilet bowl.
3. Remove four nuts and shoulder washers.
4. Carefully remove toilet bowl from base.
5. Rotate toilet bowl to desired position.
6. Replace four shoulder washers, nuts and vinyl caps.

**NOTE:** Tighten nuts carefully and evenly to 20 in-lb [2.26 Nm].

**DO NOT OVER TIGHTEN.**

## Mounting Toilet

**Mounting surface must be flat and solid.**

1. Install seat on toilet (FIG 2).
2. Remove motor cover.
3. Place toilet where it will be located.  
**Make sure there is room to route hoses.**  
**Make sure seat will open properly (FIG 3).**
4. Mark location of toilet base mounting holes on mounting surface (FIG 2).
5. Drill holes for toilet mounting bolts/screws.

**NOTE: Hole size will depend on type of bolt/screws used (5/16" [8 mm] size bolts/screws are recommended).**

6. Secure toilet to surface.

## Additional Parts Required

- Stainless Steel Mounting bolts or lag screws and washers  
 Toilet: 5/16" [8 mm] (4)  
 Remote Intake Pump: 1/4" [6 mm] (4)
- 1" [25 mm] or 1 1/2" [38 mm] I.D. discharge hose
- Reinforced intake hose, 3/4" [19 mm] for raw water models or 1/2" [13 mm] for Fresh Water Models
- Hose clamps (2 for each connection below waterline)
- Wire (See specification chart)
- Terminals
- Fuse/circuit breaker (See specification chart)
- Strainers are optional, but highly recommended:  
 Fresh Water Strainer (190601)  
 Raw Water Strainer (163000)

FIG 1

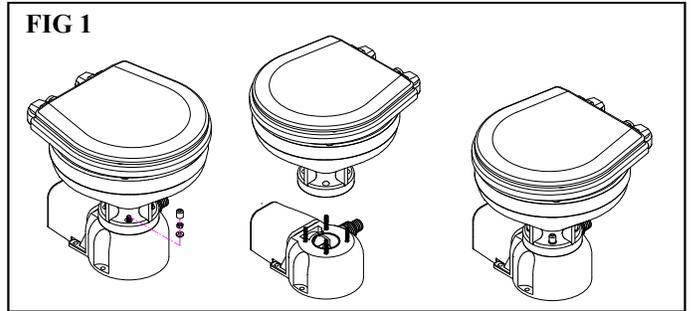


FIG 2


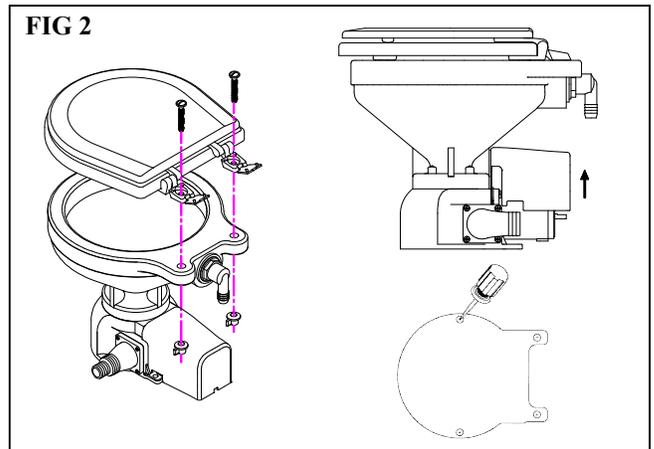


FIG 3

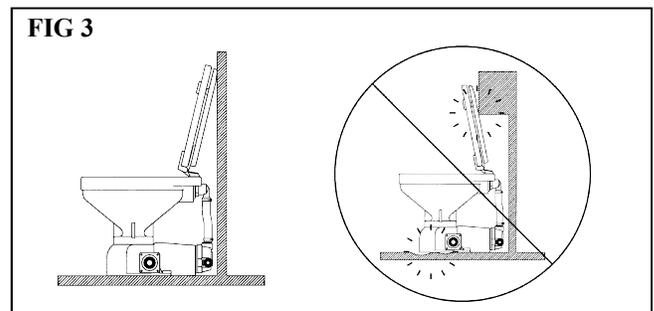

## PLUMBING

### IMPORTANT

- Discharging untreated sewage is forbidden in all U. S. waters within the three-mile limit.
- Fittings and 90° bends should be kept to a minimum.
- In-Line Strainer may be installed on raw water models to prevent clogs.
- Thru-hull fittings and seacocks must be installed where they are easily accessible.
- Use only quality reinforced hoses such as Raritan SANIFLEX HOSE.
- Secure all hoses properly.

### Discharge Fittings

**NOTE: Do not cut/alter the straight fitting**

The SeaEra QC has a straight discharge fitting installed. A 1 1/2" [38 mm] 90° fitting is also provided. A 1" [25 mm] hose adapter for the 90° fitting is included as well.

To change the discharge fitting (FIG 6):

1. Remove four screws securing fitting to base.
2. Remove flange adapter from the straight fitting and install it on the 90° fitting.
3. Install 90° fitting to base. Be certain the joker valve is properly in place.
4. If 1" [25 mm] discharge hose will be used, install the 1" [25 mm] hose adapter into the 90° fitting. Use non hardening thread sealant.

**IMPORTANT: Do not overtighten!**

### Discharge Lines





**Raritan Sanitation Hose is recommended. Use part number SFH for 1 1/2" [38 mm] hose or SFH1 for 1" [25 mm] hose**

1. Connect sanitation hose to discharge fitting on toilet.

**NOTE:** Installed Straight Discharge fitting is designed for 1" [25 mm] or 1 1/2" [38 mm] hose.

1 1/2" [38 mm] hose is secured at top of fitting and 1" [25 mm] is secured at the bottom. It is not necessary to remove the 1" [25 mm] barb if using 1 1/2" [38 mm] hose. Use the fitting as is.

2. Run hose to appropriate device (e.g.: treatment system, holding tank, etc.).

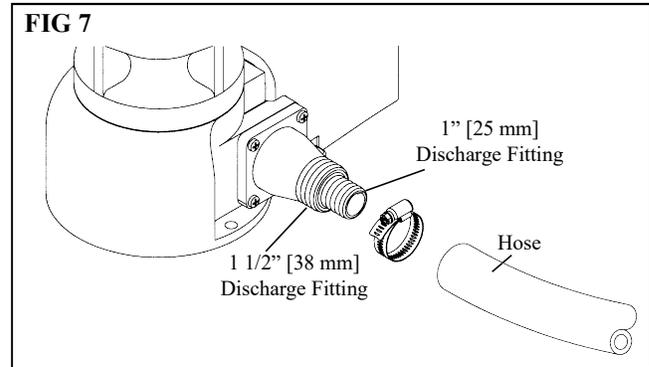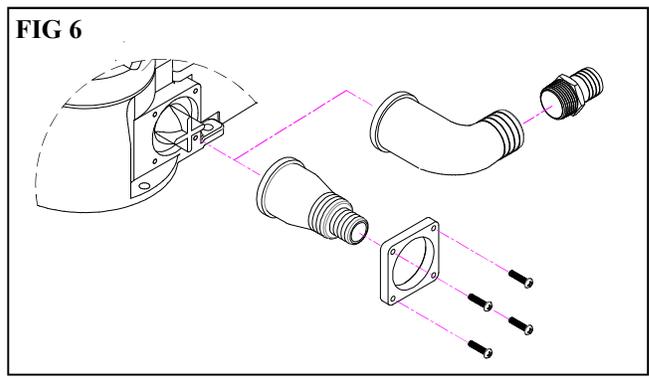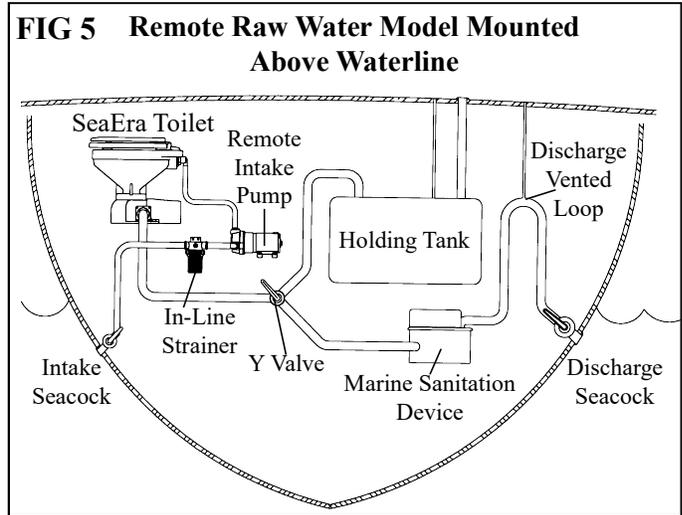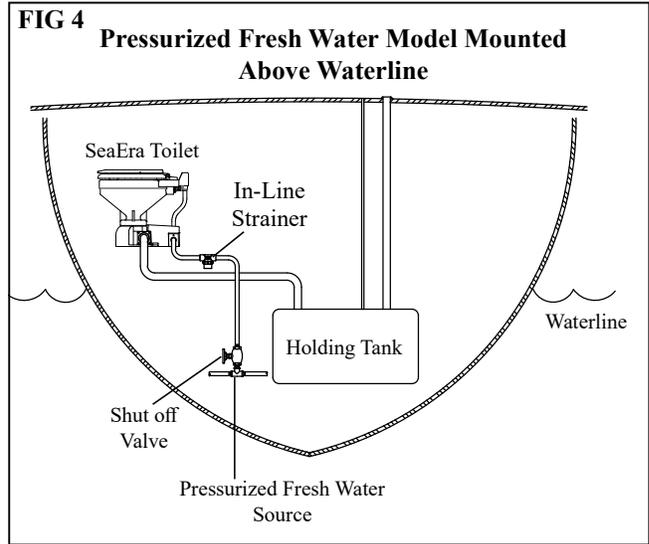

## Intake Lines

### Pressurized Fresh Water Models

**NOTE:** To avoid malfunction of water solenoid due to debris in water, installation of Fresh Water Strainer (190601) is recommended.

1. Install a shut off valve in intake line before water solenoid valve.
2. Connect hose from shut off valve to inlet port of water solenoid valve (FIG 8).

### Mounting Remote Intake Pump (FIG 11)

1. Locate remote pump between thru-hull fitting and toilet bowl.
2. Position it in an area away from the berth to minimize noise levels.
3. The Remote Intake Pump must be mounted on a flat, solid surface that is dry and well ventilated.
4. Using an Inline Strainer (optional) is recommended to prevent clogs.
5. Mark and drill the mounting holes.

**NOTE:** The hole size will depend on the type of bolts or screws used: 1/4" [6 mm] recommended.

6. Mount the pump, ensuring the bolts are not over-tightened.

### Raw Water Models (FIG 9)

Intake pump fittings are interchangeable to allow more flexibility during installation. Inlet ports are located on either side of intake pump. Outlet port (to toilet bowl) is at top of intake pump (FIG 10).

**NOTE:** To avoid poor pump performance, installation of strainer (163000) is recommended.

1. Slide fitting clips to open position.
2. Select inlet port to be used.
3. Install appropriate fittings into inlet and outlet ports.

**NOTE:** The 90° fitting can be rotated 360°.





4. Install the plug fitting into unused inlet port.

**IMPORTANT:** Do not install plug fitting into outlet port! Damage to pump will occur!

5. Slide fitting clips back to closed position.
6. Connect hose from seacock to inlet port of optional In-Line Strainer if installed.
7. Connect hose from outlet port of In-Line Strainer to inlet port of intake pump.

**IMPORTANT:** Double clamp all below waterline hose connections!

8. Connect hose from outlet port of intake pump to bowl elbow located on back of toilet bowl.

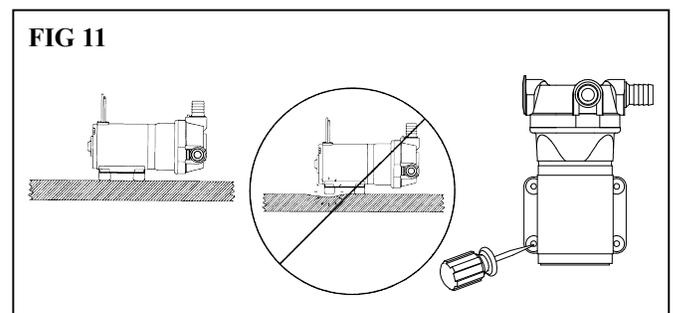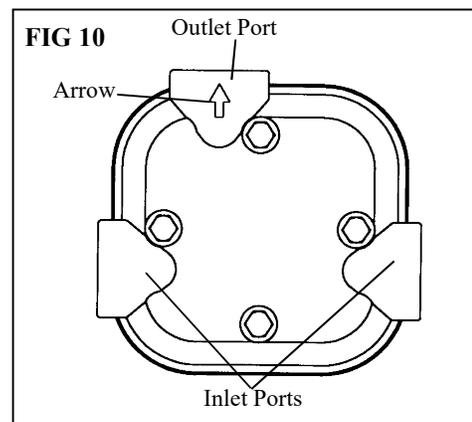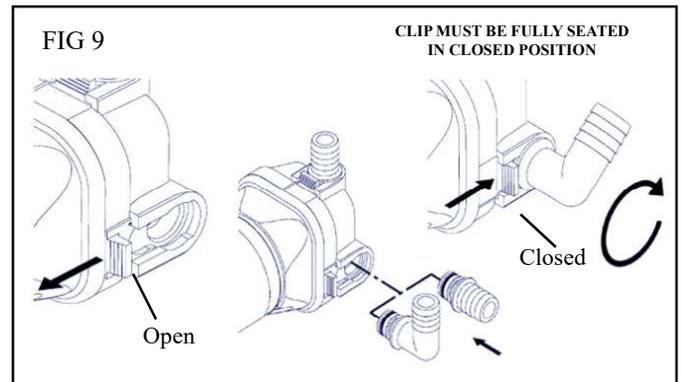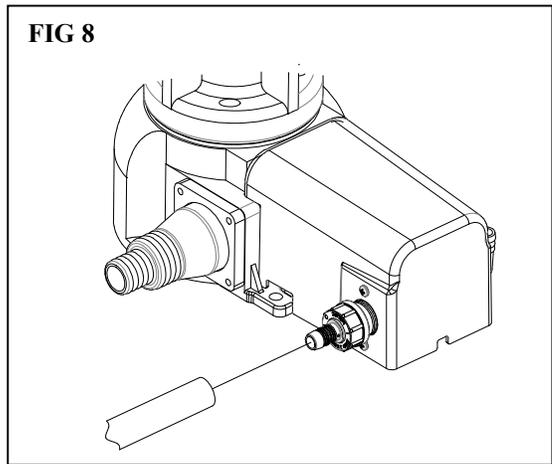

See **SYSTEM START-UP** instructions on page 3

## TROUBLESHOOTING


**WARNING:** **HAZARD OF ELECTRIC SHOCK** - Before beginning any work on the SeaEra, be sure that all power to the unit has been turned off.

**WARNING:** **HAZARD OF FLOODING** - Make sure seacocks are in the **CLOSED** or **OFF** position before working on toilet.


**NOTE:** The following information reflects the most probable causes and solutions to problems although not every possible cause and solution is provided. Any questions regarding servicing or operation of the SeaEra should be directed to our Technical Support Department in Millville, NJ. Please have model and serial number available before calling.

PROBLEM	POSSIBLE CAUSE	SOLUTION
1. Poor pumpout, especially solids.	1A. Clogged discharge line. 1B. Plumbing restrictions, bends and ells. 1C. Clogged vents. 1D. Mineral buildup in hoses and fittings. 1E. Low voltage.	1A. Be sure discharge seacock is open. Clear line, remove clog. 1B. Replumb to eliminate bends and ells. 1C. Clean holding tank vent and vented loop vents 1D. Clean or replace affected parts. Replace hose if needed. 1E. Check voltage at toilet <b>while toilet is running</b> . If less than nominal voltage of toilet (12, 24), check condition of batteries and wire sizes. Check terminals and wire connections for corrosion (heat at terminals and junctions indicates a bad or corroded connection).
2. Poor water flow, especially at front of bowl (or no water flow).	2A. Toilet not level. 2B. Restriction in intake line. 2C. Pump sucking air. 2D. Low voltage. 2E. Clogged strainer.	2A. Raise rear of toilet; check with level. 2B. Be sure seacock is open. Clear line-remove clog. 2C. Check all connections from intake thru-hull to intake pump to be sure no air leaks are present. 2D. See 1E, above. 2E. Remove or clear debris from strainer.
3. Foul odors from toilet area.	3A. "Marine life" lodged in rim of bowl. 3B. Permeated discharge hose. 3C. Sewage remaining in discharge line.	3A. Remove and flush bowl with pressure hose to remove all material. Install strainer or KO2 kit in intake line to avoid recurrence. 3B. Replace hose with Raritan sanitation hose (#SFH). 3C. Flush longer; replace hose if permeated; reroute hose making a shorter run or downward slope if possible.
4. Bowl fills while underway.	4A. Pressure buildup at seacocks.	4A. Close intake, then discharge seacock to determine which is causing problem. If discharge, be sure the vent or vented loop is clean. If intake, there is too much pressure on seacock; contact Raritan Technical Support.
5. Water leaking from under unit.	5A. Leaking bowl gasket. 5B. Leak at shaft seal. 5C. Leak from seal plate area.	5A. Tighten (4) bowl mounting nuts (#1226B). 5B. Check seal and motor shaft. 5C. Check seal plate o-ring.
6. Erratic operation/sluggish running.	6A. Worn motor brushes. 6B. Motor bearings damaged by seal leak. 6C. Low or inconsistent voltage.	6A. Return motor to factory for servicing or replacement. 6B. Return motor to factory for servicing or replacement. 6C. See 1E above.

### Tip for Removing Intake Pump

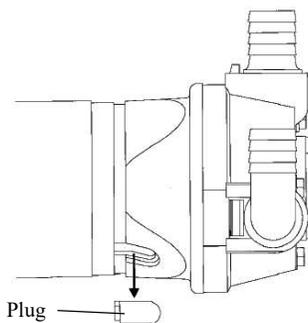

Set screw must be loosened with 5/32" [4 mm] hex key before removing the intake pump from motor

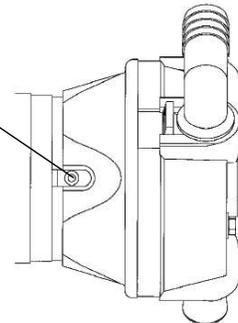

## SeaEra QC Model 162 Parts List

<b>Item</b>	<b>Part#</b>	<b>Description</b>
1	1237W	Marine-size Bowl
1	1244W	Household-style Bowl
2	1236AW	Bowl Spud Assembly
3	1236E	Bowl Elbow (Raw Water Model)
4	221361	Sealing Washer
5	1234	Bowl Gasket
6	VCAP	White Vinyl Cap (4)
7	1226B	1/4-20 Hex Nut (4)
8	RNI	Shoulder Washer (4)
9	CH38	1/4-20" x 2 Threaded Stud (4)
10	161105AW	Base (includes 16, 22 and 23)
11	C254	Joker Valve
12	161130	Discharge Fitting
13	1222D	90° Discharge Fitting
14	161125	Discharge Mounting Flange
15	F164	Discharge Mounting Flange Fastener (4)
16	161107A	Seal Plate O-Ring
17	1108A	Macerator Nut
18	M23A	Macerator Lockwasher
19	53145	Macerator Blade
20	161120	Impeller/Macerator Housing
21	161115	Impeller
22	31-102	Shaft Seal
23	161110A	Seal Plate
24	161012	Discharge Motor, 12 VDC
24	161024	Discharge Motor, 24 VDC
25	HW1	Mounting Screw Lockwasher (4)
26	F098	1/4 - 20 x 1" Hex (4)
29	PLA34	Adapter: 1" MPT x 1" Hose

### RAW WATER MODELS

27	161135	Motor Cover
40	166012A	Intake Pump Motor, 12 VDC
40	166024A	Intake Pump Motor, 24 VDC
41	162000W	Remote Intake Pump w/o Motor
42	162405	3/4" Hose Barb 90° Fitting (2)
43	162410	3/4" Hose Barb Straight (2)
44	162415	Plug Fitting
45	162420	Fitting Retaining Clip (3)
46	162425	O-ring (3)
47	F162VT	Inlet Pump Mounting Bolt (4)
48	F144	#10 Washer SS Flat (4)
49	166000	Complete Remote Pump, 12 VDC
49	166100	Complete Remote Pump, 24 VDC

### INLINE STRAINERS (RECOMMENDED)

51	190601	Inline Fresh Water Strainer (Optional)
61	163000	Inline Raw Water Strainer (Optional)

### FRESH WATER MODELS

70	161145	Motor Cover
71	221351	Water Solenoid, 12 VDC
71	221352	Water Solenoid, 24 VDC
72	PLH-50P	Hose, white 1/2", 1'
73	PLE90-50N	Elbow, 1/2" 90° Barbed
74	221366	Clips
75	161146	Grommet Plate
76	F201	Screw M4 x 10 mm
77	221357	Hose Adapter, Straight
78	221356	Nut
79	41-142	Hose Clamp (4)
80	168006	Vacuum Break Cover
81	221360	O-ring
82	25309	Nut 3/4" FNPT
83	221300	Vacuum Breaker Assembly
84	1238SC	Slow Close Marine-size Seat and Cover
84	1245SC	Slow Close Household-style Seat and Cover

### DISCHARGE ASSEMBLY


161000AW	Base Assembly w/o Intake Pump, 12 VDC (includes 5-11 and 16-26)
161100AW	Base Assembly w/o Intake Pump, 24 VDC (includes 5-11 and 16-26)

### Repair Kits

DIAPUMPRK	Diaphragm Pump Repair Kit
SEADISRK	SeaEra Discharge Repair Kit

162400	Fittings Kit for Diaphragm Pump (includes 42, 43, 44 and 46)
--------	---

# SeaEra QC Series Exploded Parts View

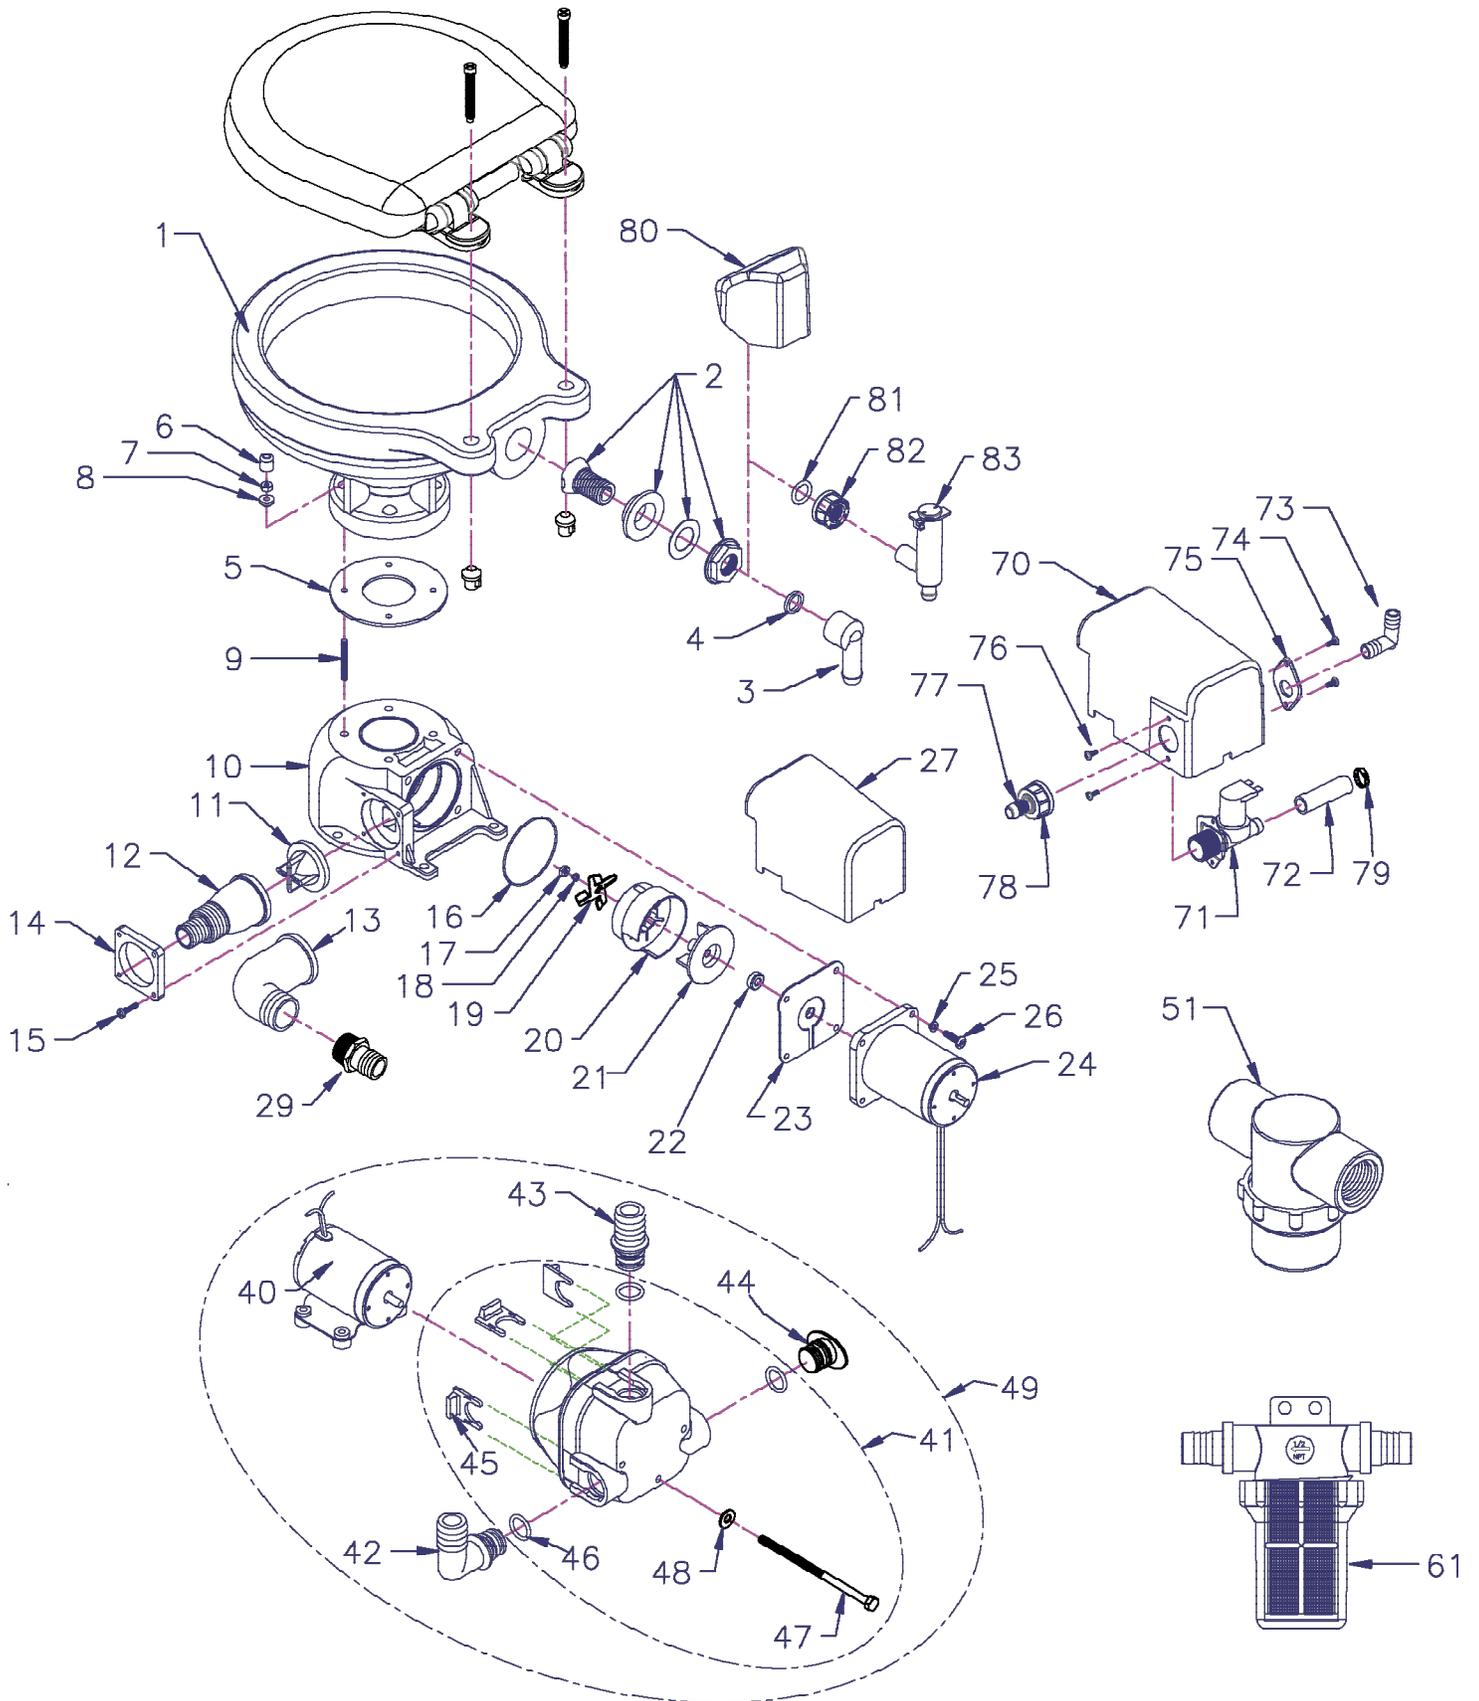

---

---

## LIMITED WARRANTY

Raritan Engineering Company warrants to the original purchaser that this product is free of defects in materials or workmanship for a period of two years from the product's date of purchase. Should this product prove defective by reason of improper workmanship and/or materials within the warranty period, Raritan shall, at its sole option, repair or replace the product.

1. TO OBTAIN WARRANTY SERVICE, Consumer must deliver the product prepaid, together with a detailed description of the problem, to Raritan at 530 Orange St., Millville, N.J. 08332. When requesting warranty service, purchaser must present a sales slip or other document which establishes proof of purchase. THE RETURN OF THE OWNER REGISTRATION CARD IS NOT A CONDITION PRECEDENT OF WARRANTY COVERAGE. However, please complete and return the owner Registration Card so that Raritan can contact you should a question of safety arise which could affect you.
2. THIS WARRANTY DOES NOT COVER defects caused by modifications, alterations, repairs or service of this product by anyone other than Raritan; defects in materials or workmanship supplied by others in the process of installation of this product; defects caused by installation of this product other than in accordance with the manufacturer's recommended installation instructions or standard industry procedures; physical abuse to, or misuse of, this product. This warranty also does not cover damages to equipment caused by fire, flood, external water, excessive corrosion or Act of God.
3. ANY EXPRESS WARRANTY NOT PROVIDED HEREIN, AND ANY REMEDY FOR BREACH OF CONTRACT WHICH BUT FOR THIS PROVISION MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. ALL IMPLIED WARRANTIES SUCH AS THOSE OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE, IF APPLICABLE, AS WELL AS ANY IMPLIED WARRANTIES WHICH MIGHT ARISE BY IMPLICATION OF LAW, ARE EXPRESSLY LIMITED TO A TERM OF ONE YEAR. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG A LIMITED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
4. UNDER NO CIRCUMSTANCES SHALL RARITAN BE LIABLE TO PURCHASER OR ANY OTHER PERSONS FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
5. No other person or entity is authorized to make any express warranty, promise or affirmation of fact or to assume any other liability on behalf of Raritan in connection with its products except as specifically set forth in this warranty.
6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



530 Orange Street, Millville, NJ 08332 USA  
Telephone: 856-825-4900  
FAX: 856-825-4409  
[www.raritaneng.com](http://www.raritaneng.com)

# Thank you for purchasing a Raritan SeaEra QC

Model and Serial#:

Please have this available if support is needed.

SCAN for  
Owners Manual



L365

SCAN for  
Warranty Form



If you prefer a printed version of the Owners Materials:

Email: [info@raritaneng.com](mailto:info@raritaneng.com)

Questions on installation?

Email: [techsupport@raritaneng.com](mailto:techsupport@raritaneng.com)



## Do not return this product to store.

**PLEASE RETAIN FOR YOUR RECORDS**