PURASAN® EX

OPERATION, MAINTENANCE AND INSTALLATION INSTRUCTIONS

(Models PST*EX [*specify 12, 24] Manufactured after November 1 2015)

THE FOLLOWING ARE CAUTIONARY STATEMENTS THAT MUST BE READ AND

FOLLOWED DURING BOTH INSTALLATION AND OPERATION

WARNING: Raritan Engineering Company, Inc. recommends that a qualified person or electrician install this product. Equipment damage, injury to personnel or death could result from improper installation. Raritan Engineering Company, Inc. accepts no responsibility or liability for damage to equipment, or injury or death to personnel

that may result from improper installation or operation of this product.

WARNING: HAZARD OF SHOCK AND FIRE

Always use recommended fuse or circuit breaker and wire size.

HAZARD OF FLOODING - When leaving the boat unattended always be sure seacocks are closed. Any installation made below waterline should have double hose clamps securing lines. The halogen disinfectant is corrosive to aluminum, copper and steel. The plumbing system must not include any aluminum, copper

or steel fittings, piping or holding tanks.

IMPORTANT SAFETY INSTRUCTIONS FOR HANDLING PURASAN® TABLETS AND SOLUTION

WARNING: PURASAN® EX disinfecting tablets are a strong oxidizing agent and highly corrosive. Use or contact with oil, acids, petroleum products, reducing agents or other chlorine compounds such as swimming pool tablets, is extremely dangerous.

WARNING: Fire or explosion could result. Improper use of this tablet may cause personal injury or property damage. Tablets may be fatal if swallowed and tablet dust is irritating to the eyes, nose and throat. Keep out of reach of children and do not allow tablets or solution of tablets to contact skin, eyes or clothing. Handle and store tablets as per instructions provided with packaging. Contact Raritan if handling instructions are missing. Store only in sealed original container in well-ventilated area. Read tablet container label carefully prior to use. It is unsafe and violation of Federal law to use tablets in a manner inconsistent with its labeling.

The PURASAN®EX is a U. S. Coast Guard Certified Type I Marine Sanitation Device for use on uninspected vessels 65 feet and under. It must be operated within navigable waters inside the three mile limit that are not declared Federal No Discharge Zones (NDZ) by the U.S. Environmental Protection Agency (EPA). Other countries - check with local authorities.

The PURASAN®EX is designed for recreational use and accommodates most marine toilets. It can be used with up to two toilets. The PURASAN®EX is available in 12 or 24 VDC.

DESCRIPTION:

Each time the toilet is flushed an equal amount of previously treated waste is discharged. The flushing action of the toilet pump moves the waste through the PURASAN®EX and out.

Water is diverted to the Tablet Dispenser during the flush cycle, creating a halogen solution during hold time. After the hold time the Drain Manifold and Air Pump turn on and solution drains into the Treatment Unit.

The first chamber macerates to reduce particle size and uniformly mix the waste with injected halogen solution. The second chamber mixes to ensure uniform treatment of contents.

Model and Serial #						

Link to online Warranty Registration





OPERATION

Single Button Operation -

Both toilet and PURASAN®EX are operated by one of the following options:

Note: Toilet may be flushed as often as necessary during first 30 seconds. Do not exceed recommended flush volume of 1.5 Gallons (5.7) liters per flush.

Option #1: (recommended) Toilet Push Button -

Flushing toilet will activate treatment cycle. Two toilets can activate one PURASAN®EX.

Option #2:

PURASAN®EX Switch Panel

Start/Stop button activates both the toilet and treatment cycle.

Note: Toilet flush time is programmable. Only one toilet can be activated by PURASAN®EX panel.

Pressing Start/Stop during the cycle will stop the cycle.

Independent Operation (toilet and treatment)


- 1. Press Start/Stop button.
- 2. Flush toilet as often as necessary. Do not exceed recommended flush volume.


After cycle is started:

- Water is diverted to the Tablet Dispenser and must rise to the water level line (dotted lines) but no higher. (See programming to adjust)
- The PURASAN®EX should not be activated again until the cycle is complete.

Note: Pressing Start/Stop during the cycle will stop the cycle. If water is in the Tablet Dispenser, the Air Pump will activate to remove water after stop button is pressed.

- Flashing Treatment LED indicates treatment cycle in process.
- Slow flashing Error LED indicates tablet refill is needed (1 flash every 2 seconds).
- Fast flashing Error LED indicates that Tablet Dispenser is overfilled with water or more than two tablets are loaded during refill (2 flashes every second).
- Solid Error LED indicates motor fuse is blown (Part # FUSE10, Item 86, Page 12).

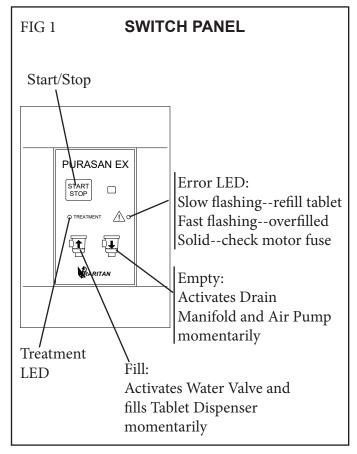

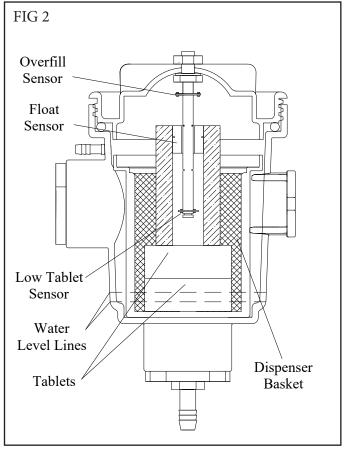


MAINTENANCE


REFILLING TABLETS (#41-135A)

IMPORTANT: Read all Safety precaution on the tablet container before handling and installing tablets. Use ONLY PURASAN® Tablets.

When Error LED is flashing it is an indication tablets in the dispenser are depleted to less than one tablet and refill is needed.

- 1 Remove all water by pressing "empty" button on the panel before opening lid.
- 2. Turn off power.
- 3. Unplug connectors on dispenser lid as shown on FIG 3.
- 4. With adequate ventilation available, unscrew tablet dispenser lid (FIG 4).
- 5. Gently place two tablets into the cartridge (FIG 4).
- 6. Tightly replace lid on Tablet Dispenser.
- 7. Reconnect connectors as shown in FIG 3.
- 8. Turn on power

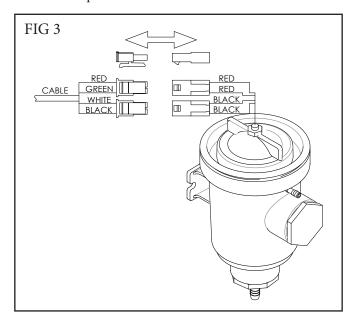

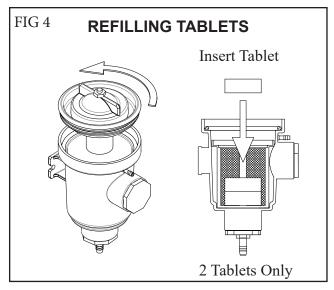

CLEANING OF TANK CHECK VALVE (41-170) AND ½" HOSE

- A. Raritan recommends that the Tank Check Valve (Part # 41-170, Item 58, Page 12) be replaced after approximately 300 cycles or one depleted bucket.
 - 1. Press fill button till water fills up entire ½" hose just below tablet dispenser.
 - 2. Press and hold "empty" button until all hoses up to check valve on treatment tank are empty.
 - 3. Repeat steps 1&2 three more times.
 - 4. Close sea cocks
 - 5. Close hose clamp completely (Part #31-304C, Item 59, Page 12). Remove check valve assembly. Thoroughly clean assembly with warm water. Make sure check valve plunger is moving by using a paper clip. If check valve is stuck, replace it.

CLEANING: Do not add any other chemicals or cleaning products to the toilet or the treatment system. Raritan C.P. (part # 1PCP32) - Cleans Potties is the only factory-recognized cleaning product that may be used in the toilet.

INITIAL START-UP AFTER ALL INSTALLATION STEPS ARE COMPLETE

CAUTION: Do not load tablets into Tablet Dispenser until Steps 1-7 are completed.

- 1. Remove crossover cap from Treatment Unit tower. Pour 3 gallons (11.5 liters) of water into treatment unit. Replace crossover cap.
- 2. Turn on water to the Water Valve.
- 3. Turn on power to unit.
- 4. Priming: Press and hold "FILL" button until water reaches to the water line on the Tablet Dispenser.
- 5. Press and hold "EMPTY" button until Tablet Dispenser and 3/8" tube to Treatment Unit is empty.
- 6. Operate the system. Check water level in the cartridge and make sure water is rising to the mark. If starting for first time or if water does not rise to the mark, see instruction in Programming section to adjust timing.
- 7. Check for leaks.
- 8. Load the Tablet (see refilling tablet section).

IMPORTANT:

Improper winter lay up is a major cause of failure. **WARNING:**

Do not use anti-freeze of any kind to winterize the PURASAN EX system.

Treatment Unit

- 1. Flush toilet and activate PURASAN EX several times to clean out hoses and tank.
- 2. Turn off water supply to the toilet and flush toilet as dry as possible. **Note:** Use caution flushing toilet dry review manufacturer's instructions to ensure no damage is done to any components.
- 3. Shut off water valve feeding Control Module.
- 4. Press EMPTY button to drain out all water from Tablet Dispenser and tubing.
- 5. Turn off power and disconnect wires from Purasan EX Control Module.
- 6. Remove water connection to Control Module and drain tube.
- 7. Close seacocks.
- 8. Slowly open crossover plug (#25 page 12)

Caution: If Treatment Unit is the lowest part of the system, water will spill out. Review plumbing carefully before slowly opening plug.

- 9. Using a drill pump or equivalent and 3/8" tube, remove water from each side of partition in Treatment Unit through crossover plug.
- 10. Disconnect and drain waste hoses.

Winterizing the Toilet - Follow the instructions in the Owner's Manual for that particular toilet.

Recommissioning IMPORTANT:

- Do not open shut-off valve feeding control module until Treatment Tank is full.
- Do not operate PURASAN®EX until Treatment Unit is filled with water.

Treatment Tank

- 1. Reconnect waste hoses and open seacocks.
- 2. Reconnect wires to control module

NOTE: Purasan Treatment Unit must be full before activating a cycle.

- 3. Fill the Treatment Unit: (Depends on how unit is activated)
 - Single button operation Remove crossover plug from Treatment Unit and fill with a minimum of three gallons of water. Replace crossover plug and o-ring.
 - Independent operation flush toilet allowing three gallons of water to pass into PURASAN®EX
- 4. Turn on power
- 5. Open water valve feeding control module.
- 6. Priming: Press and hold "FILL" button until water reaches to the water line on the Tablet Dispenser. Press and hold "EMPTY" button until Tablet Dispenser and 3/8" tube to Treatment Unit is empty.
- 7. Operate the system. Check water level in the cartridge and make sure water is rising to the mark. If starting for first time or if water does not rise to the mark, see instruction in Programming section to adjust timing.
- 8. Check for leaks.

ANTIFREEZE WARNING -

If Antifreeze is used to winterize toilet, it must be removed prior to connecting hoses to the Treatment Tank. It MUST not pass through the Treatment Unit.

U.S.C.G. Type I MSD Certification #159.015/0010133/0

Maximum Roll/Pitch Angle: 30°

Maximum Temperature Exposure: 120° F (49° C)

Maximum Total Flush Volume: 1.5 gallons/flush (5.7 liters/flush)

Water - fresh, salt or brackish Approximate Number of cycles per tablet--50

NOTES: for Wiring

- 1. Distances are from source to unit and back to source
- 2. Recommended conductor wire minimum AWG (mm) for 3% voltage drop.
- 3. Recommended conductor sizes are based on 105°C rated insulation. Refer to ABYC standards for other insulation ratings.

Recommended Wire and Fuse/Circuit Breaker Size

Units Voltage	Circuit Breaker/ fuse size (amps)	Amp. draw @ nominal voltage	10 feet	15 feet	20 feet	25 feet	30 feet	40 feet	50 feet
12 VDC	20	10	12 AWG	12 AWG	10 AWG	10 AWG	10 AWG	8 AWG	6 AWG
24 VDC	15	8	14 AWG	14 AWG	14 AWG	12 AWG	12 AWG	10 AWG	10 AWG

Fuse Specifications:

Fuse F1 for Motors (12V and 24V) Located in the

SPC Control Box:


ATO 10 AMPS, Maxi blade type.

CONVERSIONS


Wire - AWG to mm²

AWG	16	14	12	10	8	6	4	2
mm²	1.5	2.5	4.0	6.0	10.0	16.0	25.0	35.0


Feet to Meters							
Ft	10	15	20	25	30	40	50
M	3.1	4.6	6.1	7.6	9.2	12.2	15.2

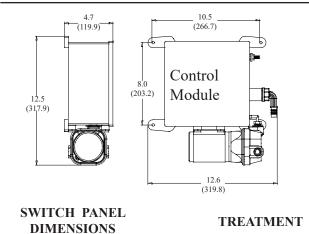


DIMENSIONS

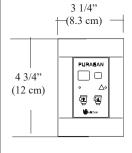

TREATMENT UNIT DIMENSIONS

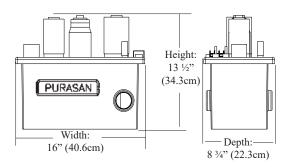

TABLET DISPENSER **DIMENSIONS**

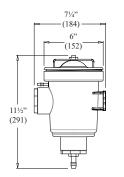


Air Pump

Parts included in the Box:


Treatment Unit



Fittings for Treatment Unit

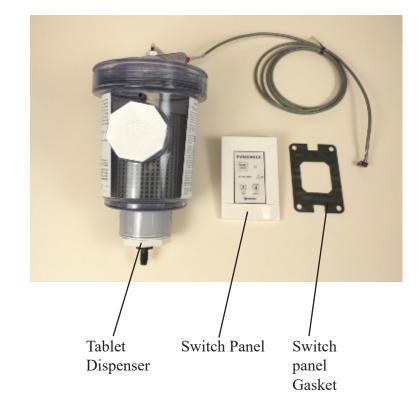

Control Module includes Drain Manifold, Water Valve Control Box (SPC) /

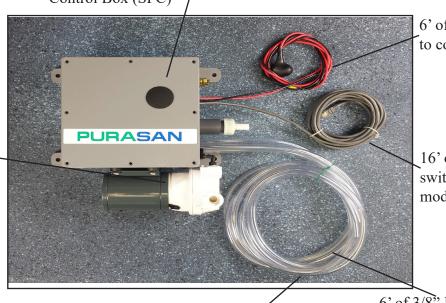

6' of black and red wire to connect treatment tank

16' of cable to connect switch panel to control module

6' of 3/8 ID and 1/4" ID hose to Tablet dispenser

6

6' of 3/8" ID hose to treatment tank

LOCATION AND MOUNTING

Treatment Unit:

WARNING: Do not locate in an area where ambient temperature exceeds 120° F (49° C).

1. Locate top of treatment tank at or below discharge of toilet and within six feet (1.5 m) of toilet.

Note: Longer runs require additional flush time to avoid sewage laying in the hose.

Note: If mounting treatment tank higher than discharge, a vented loop must be used between toilet and Treatment Unit.

- 2. Make and secure mounting frame to flat surface. (FIG 5)
- 3. Secure tank to frame using 3/4" (1.9 cm) mounting straps.

Note: Placing a 3/8" (.9 cm) rubber pad under tank will help to reduce vibration and noise.

Control Module:

Note: Wires and hoses supplied are 6 feet between tank and Control Module and 6 feet between Tablet Dispenser and Control Module.


- 1. Locate Control Module between Tablet Dispenser and Treatment Unit. Vertical mounting recommended (FIG 6)
- 2. Using screws secure Control Module to the wall (FIG 6).


Switch Panel: Cable Supplied is 16 feet


- 1. Locate in head compartment where indicator lights will be visible.
- 2. Using base plate, mark the cutout for the panel. (See FIG 7)
- 3. Route cable between switch panel and PURASAN®EX Control Module.
- 4. Attach cable to back of switch panel.
- 5. After wiring and testing entire system: Mount panel using 4 screws. Apply a bead of nonpermanent sealant around rear edges of panel if located in shower area.

PURASAN®EX Tablet Dispenser

- 1. Locate tablet dispenser in a location where refill of tablet is convenient. (To easily remove lid and refill tablets a clearance of 8" from top of lid is recommended.)
- 2. Attach to wall or suitable structure using 1/4" (6 mm) bolts.

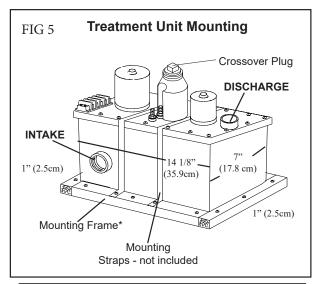

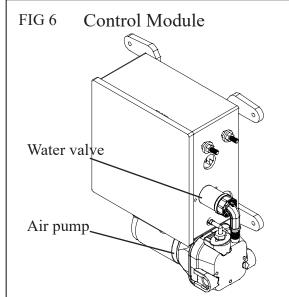

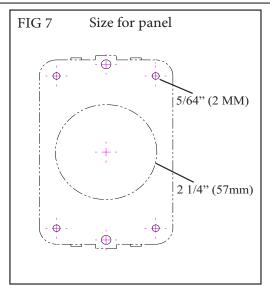

NOTE: Do Not load tablets into Tablet Dispenser at this time. Load tablets after completing start up procedure.

7

PLUMBING WARNING: HAZARD OF FLOODING

- Installations at or below waterline, at greatest angle of heel, MUST have a VENTED LOOP installed between Treatment Tank and Seacock/ Thru Hull Fitting. Install vented loops per manufacturer's instructions.
- Double clamp all below waterline hose connections.
- Use only non-corrosive fittings

A. Treatment Unit:

NOTE: Use PTFE tape or nonpermanent thread sealing compound on threaded PVC fittings and connections. Avoid low areas in hose that would allow untreated waste to collect.

- 1. Connect discharge of toilet to one intake port.
- 2. Insert plug or second toilet discharge into other intake port.
- 3. Determine position and glue discharge elbow to top of tank using PVC cement.

Note: Be certain that the discharge elbow is in the correct position before gluing.

4. Connect discharge hose from elbow to thru hull fitting.


B. Control Module: (see FIG 8)

- 1. A shutoff valve between source and Water Valve assembly is recommended. Connect pressurized water hose to Control Module.
- 2. Connect 3/8" and 1/4" tubes to Tablet Dispenser from Control Module assembly.
- 3. Connect 3/8" tubes between Control Module and Treatment Unit.
- 4. Use hose clamps for all connections.

WIRING

WARNING: Hazard of Shock and Fire

- Always use proper wire, connectors and fuse/ circuit breaker. See Specification Chart Pg. 5
- Secure wire properly.
- Do not connect other appliances to PURASAN® EX circuit.
- Make sure power is off before proceeding.
- Improper wiring can damage components and void warranty.
- Motors used with this product are "Ignition Protected". They are not however, explosion-proof as defined in 46CFR 110.15-65(e), Subchapter J-Electrical Engineering.

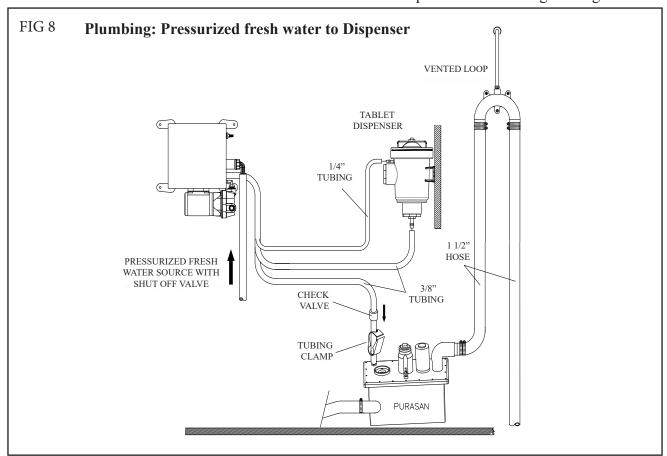

8

NOTE: Raritan recommends that the electric toilet be installed for single touch operation (Option #1 page2).

SEE FIG 9 FOR CONNECTIONS:

Treatment Unit

1. Connect two wires from Control Module to terminals on Treatment Unit.

Control Module:

- 1. Determine proper wire size from wire chart on specifications page.
- 2. Run supply wire from source Positive to Positive (POS) terminal on the Control Module and source Negative to Negative terminal on the Control Module.
- 3. Fuse or circuit breaker must be installed between source and Control Module on positive wire.

Switch Panel

1. Connect cable from switch panel to Control Module.

Tablet Dispenser:

- 1. Run sensor cable from Tablet Dispenser to Control Module. Using cable clamp secure cable on the wall near Dispenser.
- 2. Connect sensor cable to Control Module.

Flushing Option #1: (Recommended)

Toilet Push Button -

Flushing toilet will activate treatment cycle.

Note: Toilet may be flushed as often as necessary during the first 30 seconds, do not exceed recommended flush volume.

- 1. Mount switch panel near toilet.
- 2. See Figure 10 for Raritan toilets that utilize the STC control module.
- 3. See Figure 11 for standard electric toilets.

NOTE: Contact Raritan Tech Support if you have any questions regarding wiring of control.

Flushing Option #2:

PURASAN®EX Switch Panel

Start/Stop button activates both the toilet and treatment cycle.

Note: Toilet flush time is programmable. Only one toilet can be activated by PURASAN®EX panel. Pressing Start/Stop during the cycle will stop the cycle.

Toilets not utilizing an STC control:

1. See Figure 12 for standard electric toilets.

CAUTION: If wiring per Fig. 12, use only the Raritan #CDS (failure to do so will damage the control board, voiding warranty).

Toilets utilizing STC control:

1. Run wire from the H1 on SPC to FROM MSD on the STC control located inside the Control Module.

Dual installation:

Dual installation kit PSTDCEX is available if two toilets are connected to one treatment unit. Each kit comes with (1) Indicator panel, (1)16' CAT5E cable, (1) dual connector for two CAT5E cables and (1) hose fitting adapter.

Dual installations only apply when flushing using Independent Operation (page 2) or Flushing Option #1. Flushing Option #2 cannot be used.


Please note: When using Flushing Option#1, both panels will indicate the system is in use when one toilet is flushed. User must wait until system is complete to start next cycle.


Installation of Dual Connector:


Remove plug from front of box and install the dual connector in location indicated below.


Install Dual Connector here, then plug Panel #1 and Panel #2 cables in as shown



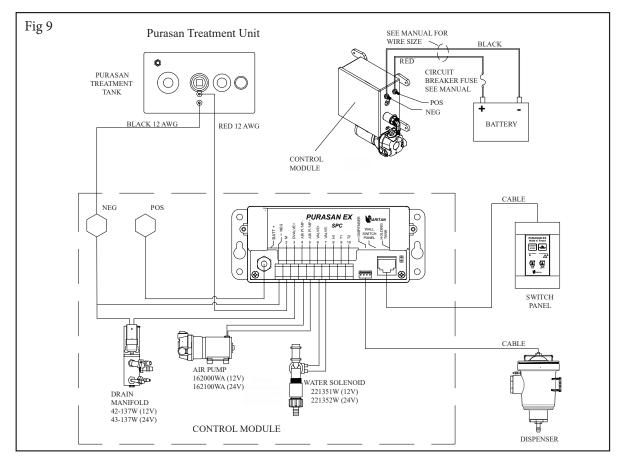

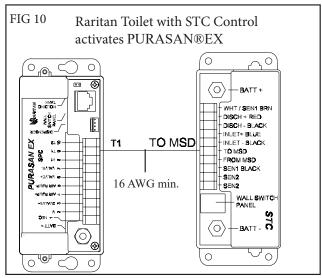

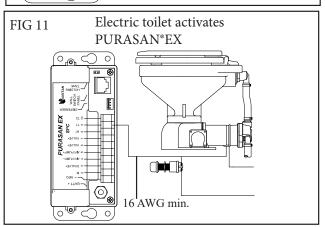

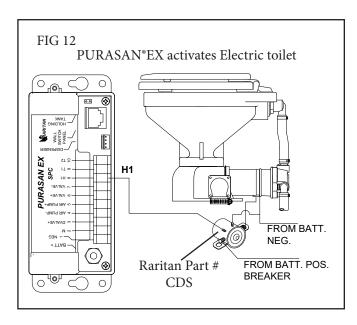

INITIAL SETTING OF "FILL" and "EMPTY"

Must be completed during installation to be sure water reaches level mark on dispenser.

NOTE: If any of the saving time settings fail, try programming it at a faster pace.

- 1. All settings should be done with water source (on board pressure pump or shore water supply) that will be used with PURASAN. Settings done will only be valid for that source, and may need to be reprogrammed if another source is utilized. Lid must be closed tight during setting and use.
- 2. Dispenser must not contain tablets during initial set-up. Program "fill" time without tablet to reach 1/4" below top marked lines, Unplug sensor cable at Control Module.
- 3. With power on, press "fill "and count seconds until water reaches to water level mark on dispenser. Record seconds as fill. If recorded seconds are greater than 18, Open the hole to approx 1/8" in metering washer between water valve (221352) and check valve (PX50W) and repeat.
- 4. Empty water below tablet dispenser bottom and entire 3/8" tube till treatment tank while pressing "empty" button and counting seconds. Record seconds as empty

5. SET PRELIMINARY "FILL" time:

- Hold the EMPTY & FILL buttons down together for three seconds. The error LED will give three quick flashes indicating you have entered program mode release both buttons.
- Press "FILL" button as many times as fill seconds recorded in step 2. example: 8 seconds press 8 times. Note: maximum is 20 and minimum is 2.
- Push the "START/STOP" button to store this value (the unit will flash three times indicating the time has been set and you have left program mode).

6. SET PRELIMINARY "EMPTY" time:

- Hold the EMPTY & FILL buttons down together for three seconds. The error LED will give three quick flashes indicating you have entered program mode release both buttons.
- Press "EMPTY" button as many times as empty seconds recorded in step 4. Note: Minimum time is set at 10 seconds. Each press of the EMPTY button will add 1 second to minimum time. Maximum is 20 seconds.
- Push the "START/STOP" button to store this value (the unit will flash three times indicating the time has been set and you have left program mode).

7. TEST SETTINGS:

Without tablets: If wired to start with toilet, flush toilet else press start/stop button. Water should fill up in the dispenser at least up to lower line but no higher than half way between line. Hold time of water is 20 seconds and not programmable.

After hold time air pump and drain valve will drain solution.

MAKE SURE THAT WATER IS DRAINED FROM ENTIRE TUBE UP TO TREATMENT TANK


Increase empty time using step 6 if drain time is not sufficient. After drain cycle, air pump and water solenoid will stay on for 10 more seconds (non-programmable) to flush check valve near tank. Repeat flush cycle to check fill time. If water is not filling up to level between lines, increase or decrease fill time using steps 2 to 6.

Note: Cycle after drain cycle can be stopped by pressing start/stop button at any time.


With tablets: Follow start up procedure. Load tablets and plug sensor cable. If wired to start with toilet: flush toilet, else press "START/STOP" button, water should fill up between level line. Make final adjustment as per above instructions if needed.

Setting of Toilet flush time:

- Hold the EMPTY & FILL buttons down together for three seconds. The error LED will give three quick flashes indicating you have entered program mode - release both buttons.
- Press small button (see Fig 13) marked "_" (next to start /stop button) as many times as needed set toilet flush time.(One push = 1 sec's, two = 2 sec's, three= 3 sec's etc.) The LED will flash once indicating a valid key push. Note: Maximum is 12 seconds.
- Push the "START/STOP" button to store this value (the unit will flash three times indicating the time has been set and you have left program mode).

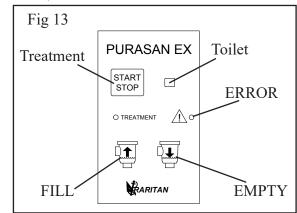

PURASAN EX EXPLODED VIEW

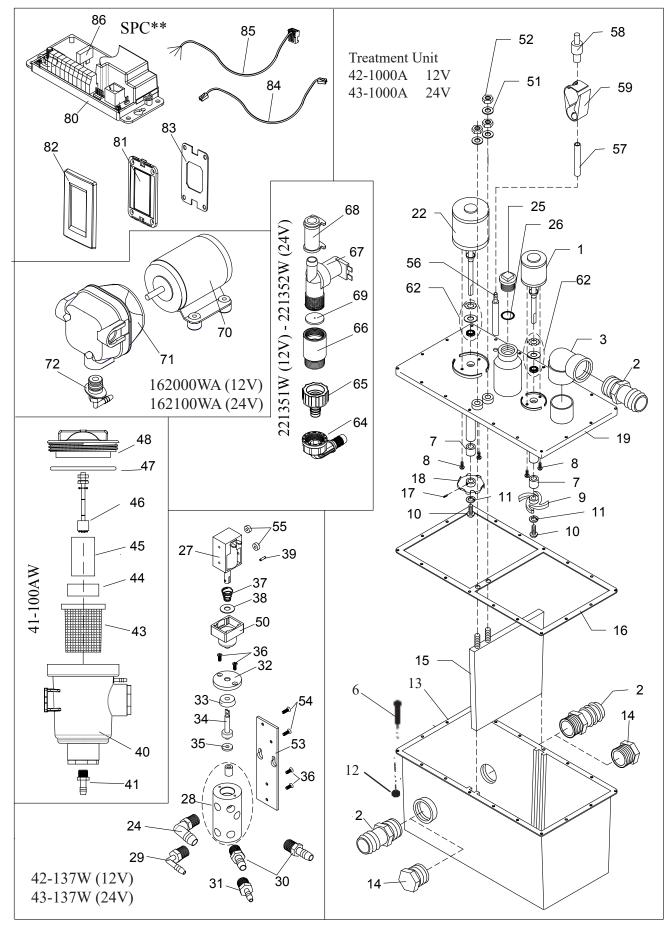


EXPLODED PARTS


PURASAN EX PARTS LIST

1 (1) (2) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4	1) includes shall	Mixer Motor 2 1/2" Dia. 12 V DC Mixer Motor 2 1/2" Dia. 24 VDC naft seals and bushing for mixer motor) Hose Fitting (2) 90% hose fitting (PLA401) Discharge Elbow 90% Cover Hold down Bolt, 10-32 x 1" (18) Motor Shaft Bushing (2) (see 62) Motor Hold down Bolt, 10-32x1", S/S (4) Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket Macerator Set Screw	40 41 43 44 45 46 47 48 85 WA ' 64 65 66 67 67 68	221358W 221356W PX50W 221351	Dispenser Body. Adapter 1/2"NPT x 1/2" barb Dispenser Basket Purasan Tablets (sold saparately) Float extension pipe (foam) Float sensor "O" Ring Dispenser Cap (machined) Cable for Float sensor 221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
3 6 7 8 9 10 11 12 13 14 15 16 17 18 19 42 22 11	1) includes shall	haft seals and bushing for mixer motor) Hose Fitting (2) 90% hose fitting (PLA401) Discharge Elbow 90% Cover Hold down Bolt, 10-32 x 1" (18) Motor Shaft Bushing (2) (see 62) Motor Hold down Bolt, 10-32x1", S/S (4) Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	43 44 45 46 47 48 85 WA 64 65 66 67 67	41-156W 41-135A 41-179 41-178W RWS5A 41-131M 41-505 TER Valve (221358W 221356W PX50W 221351	Dispenser Basket Purasan Tablets (sold saparately) Float extension pipe (foam) Float sensor "O" Ring Dispenser Cap (machined) Cable for Float sensor 221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
2	31-121 (Not shown) 31-120 31-134 31-103 F351 31-109 31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Hose Fitting (2) 90% hose fitting (PLA401) Discharge Elbow 90% Cover Hold down Bolt, 10-32 x 1" (18) Motor Shaft Bushing (2) (see 62) Motor Hold down Bolt, 10-32x1", S/S (4) Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	44 45 46 47 48 85 WA 64 65 66 67 67	41-135A 41-179 41-178W RWS5A 41-131M 41-505 FER Valve (221358W 221356W PX50W 221351	Purasan Tablets (sold saparately) Float extension pipe (foam) Float sensor "O" Ring Dispenser Cap (machined) Cable for Float sensor 221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
3 6 7 8 9 10 11 12 13 13 14 15 16 17 18 19 42 22 11	(Not shown) 31-120 31-134 31-103 F351 31-109 31-110-1 31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	90% hose fitting (PLA401) Discharge Elbow 90% Cover Hold down Bolt, 10-32 x 1" (18) Motor Shaft Bushing (2) (see 62) Motor Hold down Bolt, 10-32x1", S/S (4) Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	45 46 47 48 85 WA ' 64 65 66 67 67	41-179 41-178W RWS5A 41-131M 41-505 TER Valve (221358W 221356W PX50W 221351	Float extension pipe (foam) Float sensor "O" Ring Dispenser Cap (machined) Cable for Float sensor 221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
3 6 7 8 9 10 11 11 12 13 14 15 16 17 18 19 42 22 11	31-120 31-134 31-103 F351 31-109 31-110-1 31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Discharge Elbow 90° Cover Hold down Bolt, 10-32 x 1" (18) Motor Shaft Bushing (2) (see 62) Motor Hold down Bolt, 10-32x1", S/S (4) Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	46 47 48 85 WA 64 65 66 67 67	41-178W RWS5A 41-131M 41-505 TER Valve (221358W 221356W PX50W 221351	Float sensor "O" Ring Dispenser Cap (machined) Cable for Float sensor 221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
6	31-134 31-103 F351 31-109 31-110-1 31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Cover Hold down Bolt, 10-32 x 1" (18) Motor Shaft Bushing (2) (see 62) Motor Hold down Bolt, 10-32x1", S/S (4) Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	47 48 85 WA 64 65 66 67 67	RWS5A 41-131M 41-505 TER Valve (221358W 221356W PX50W 221351	"O" Ring Dispenser Cap (machined) Cable for Float sensor 221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
7 8 9 10 11 12 13 14 15 16 17 18 19 42 22 11	31-103 F351 31-109 31-110-1 31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Motor Shaft Bushing (2) (see 62) Motor Hold down Bolt, 10-32x1", S/S (4) Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	48 85 WA 64 65 66 67 67	41-131M 41-505 TER Valve (221358W 221356W PX50W 221351	Dispenser Cap (machined) Cable for Float sensor 221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
8 9 110 111 112 113 114 115 116 117 118 119 122 119	F351 31-109 31-110-1 31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Motor Hold down Bolt, 10-32x1", S/S (4) Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	85 WA' 64 65 66 67 67	41-505 TER Valve (221358W 221356W PX50W 221351	Cable for Float sensor 221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
9 10 11 12 13 13 14 15 16 17 18 19 422	31-109 31-110-1 31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Mixer Impeller Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	WA' 64 65 66 67 67	TER Valve (221358W 221356W PX50W 221351	221351W, 12V - 221352W, 24V) Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
10 : : : : : : : : : : : : : : : : : : :	31-110-1 31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Impeller Bolt, 12-24 x 5/8", S/S (2) Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	64 65 66 67 67	221358W 221356W PX50W 221351	Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
11 12 13 14 15 16 17 18 18 19 22	31-110-2 31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Impeller Lock Washer, #12, S/S (2) Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	64 65 66 67 67	221358W 221356W PX50W 221351	Inlet hose adapter - 90° Inlet hose adapter - straight Double Check Valve assembly
12 13 14 15 16 17 18 19 422 11 12 12 13 14 15 16 17 18 19 42 12 15 16 17 17 18 19 42 15 16 17 17 18 18 19 42 15 16 16 17 17 18 18 19 42 15 16 16 17 17 18 18 19 42 15 16 16 16 17 17 18 18 19 42 15 16 16 16 16 16 16 16 16 16 16 16 16 16	31-114 31-115PS 31-122 41-102 31-112 31-108 31-107	Cover Hold down Nut, 10-32 (18) Treatment Tank Intake Plug Tank Divider Cover Gasket	65 66 67 67	221356W PX50W 221351	Inlet hose adapter - straight Double Check Valve assembly
13 14 15 16 17 18 19 42 22 13	31-115PS 31-122 41-102 31-112 31-108 31-107	Treatment Tank Intake Plug Tank Divider Cover Gasket	66 67 67	PX50W 221351	Double Check Valve assembly
14	31-122 41-102 31-112 31-108 31-107	Intake Plug Tank Divider Cover Gasket	67 67	221351	•
15 4 16 3 17 3 18 3 19 4 22 3	41-102 31-112 31-108 31-107	Tank Divider Cover Gasket	67		
16 17 18 18 19 422 18	31-112 31-108 31-107	Cover Gasket			Water Solenoid 12V
17 18 19 22	31-108 31-107		68	221352	Water Solenoid 24V
18 3 19 4 22 3	31-107	Macerator Set Screw		221335	1/2" Hose
19 4 22 3			69	41-157	Metering washer
22		Macerator Impeller			
	41-101W	Treatment Cover (includes 56, 25,26)		AIR P	UMP for tablet dispenser
25	33-101AW*	Macerator Motor for 12 and 24 V DC unit			162000WA (12V)
	31-104CW	Crossover Plug with O-ring			162100WA (24V)
		(Includes 31-105)	70	166012A	12 Volt Motor
26	31-105	O-Ring	70		24 Volt Motor
51	M31	#14 Brass Flat Washer (4)		166024A	
52	M30	1/4"-20 Brass Nut (4)	71	162000W	Intake Pump Assembly,air pump
56	31-325A	Adapter Tank Lid	72	162415A	Plug with barbed fitting
57	221335	Hose		DIAPUMP	RK Diaphragm Pump Repair Kit
58	41-170	Tank check valve			
59	31-304C	Hose clamp	CO	NTROLS	
			80	SPC	Purasan Control
	DRAIN M	IANIFOLD ASSEMBLY	81	41-500A	Wall Panel circuit board
	42	2-137W (12V)	82	221524	ME: wall panel cover, white
	43	3-137W (24V)	83	221525	ME; wall panel gasket
24	41-151A	Adapter 1/4" x 1/2" elbow with check valve			
27	42-145	12 Volt Pull Solenoid	84	31-618	Cable for SPC wall panel
4	43-145	24 Volt Pull Solenoid	86	EFC10	ATO fuse 10A
28	41-137	Drain Manifold assy.(with check valve)		Tre	eatment Unit
29	41-151B	Adapter 1/4" x 1/4" elbow with check valve			Treatment Unit 12V
30	41-141	Adapter ¹ / ₄ " NPT x ¹ / ₂ " barbed			Treatment Unit 24V
31	PLA3	¹ / ₄ " Barbed x ¹ / ₄ " NPT Adapter	(2		
32	41-139	Cap, manifold	62	ESTRK	EST/PST Repair Kit includes follow
33	41-138C	1/4" x 3/4" U cup seal		Part No.	Description
	41-138 B	Plunger		31-102	Motor Shaft Seal (2)
	41-138A	Washer for plunger		31-102-1	Macerator Seal Washer
	F204	6-32 x 3/8" Flat head mach. screw(4)		31-102-2	Macerator Retaining Ring
	LWS	Spring		31-102-3	Mixer Seal Washer
	F203	Washer 5/16" x 3/4"		31-102-4	Mixer Retaining Ring
	F233	Spring Roll Pin		31-103	Motor Shaft Bushing (2)
	41-187	Shaft Boot		31-105	O-Ring
	41-152	Base Plate		F351	10-32x7/8" w/ O-ring (4)
		6-32 x 7/16" Flat head mach. screw (2)		31-112	Cover Gasket
	F231	Spacer 6" x 5/32"		31-113-2	Terminal Block Bolt (4)
		-r		31-114	Cover Hold Down Nut, 10-32 (4)
				SL1CC	Super Lube
PD. 10	N/DC 'to		(OTHER (Not	t shown)
1E: 12	LVDC units ar	re equipped with a 24VDC Macerator Motor	ΟΓ	41-135	A Purasan Tablets (Refill)

13

PSTDCEX Purasan Dual Control

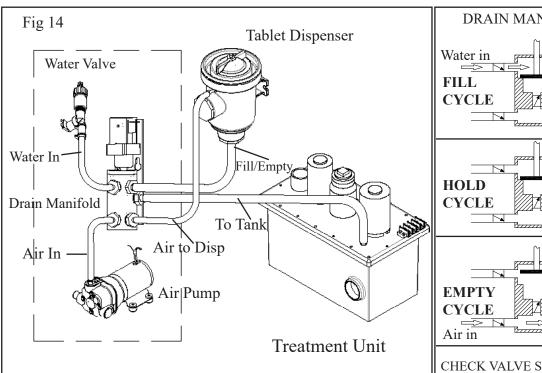


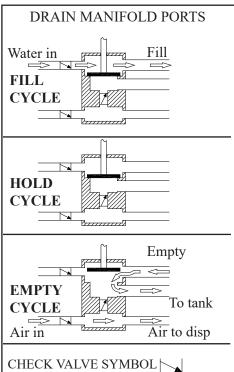

TIME SEQUENCE

Note: Fill time and Empty times are programmable, Total treatment time is 120 seconds

Cycle sequence	Motor	Drain Solenoid Air pump	Water Solenoid	H1
Start	ON	OFF	ON	ON (1 second)
Fill cycle	ON	OFF	ON	OFF
Hold cycle (20 seconds)	ON	OFF	OFF	OFF
Empty cycle	ON	ON	OFF	OFF
Wash Cycle (10 sec)	ON	ON	ON	OFF
Treatment cycle	ON	OFF	OFF	OFF

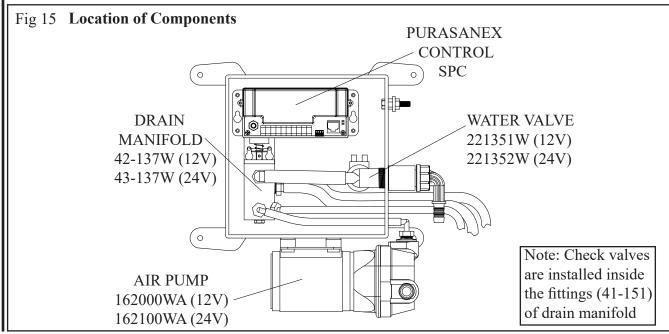

TROUBLESHOOTING

WARNING: After the Tablet Dispenser has had water added, it contains a very strong halogen solution. Always wear protective gloves and ventilate well to work on tablet dispenser. Before doing any maintenance or repairs, follow WINTERIZING/STORAGE procedures.

CAUTION: Tablet Dispenser may be under pressure. Open lid slowly to relieve pressure.

See exploded part view for location of parts

No water to tablet dispenser

• Control malfunction

Check voltage from control to water solenoid valve. Press fill button and check voltage on the terminal for water solenoid

Clogged line, check valve or fitting

Check for clog between Water valve and Tablet Dispenser. Clean or replace clogged part. Check valve is located inside the fitting 41-151A (#24).

• Empty time not programmed correctly

If Drain Manifold and Air Pump is energized too short to fill the Tablet Dispenser, re programming is needed. See page 11.

Nothing happens when button is pushed

• Fuses blown

Check fuse on circuit board

Water level is too high

If water level is high, start and fill button a are disabled. Empty button will continue to function.

• Cable connection:

Check if cable for switch panel is corroded or loose.

Overflow or water level too high in dispenser

• Clogged discharge fitting in tablet dispenser

Press empty button to run air pump and clear any clog.

• Clogged Check valve (treatment tank adapter)

Clean or replace check valve (41-170) located on the tank

Water fill time not programmed correctly

If Water Valve is energized too long it will overfill the dispenser, re programming is needed. See page 11.

• Air pump malfunction:

Press empty button and check voltage on the air pump terminals. Check the pressure of air pump (should be at least 5 PSI). Check valve for air pump is located inside the fitting 41-151B(#29).

• Float sensor malfunction:

If error LED indicates water level high and actual water level is not high, check float sensor for proper operation.

L518 0822jlc

Error LED

Error LED	START BUTTON	CAUSE
On	Does not work	Motor fuse blown
Slow flashing	Works	Tablets need refill
Fast flashing	Does not work	Dispenser overfilled

NOTE:

Discharge of raw, untreated sewage is prohibited in all U.S. waters inside the three mile limit except in the Gulf of Mexico where the limit is nine miles. "Y" valves, if installed, must direct toilet discharge to a U.S.C.G. approved treatment system or holding tank and must be secured in that position while inside the three-mile limit.

The EPA standards state that in freshwater lakes, freshwater reservoirs or other freshwater impoundments whose inlets or outlets are such to prevent the ingress or egress by vessel traffic subject to this regulation, or in rivers not capable of navigation by interstate vessel traffic subject to this regulation, marine sanitation devices certified by the U.S. Coast Guard installed on all vessels shall be designed and operated to prevent the overboard discharge of sewage, treated or untreated, or any waste derived from sewage. The EPA standards further state that this shall not be construed to prohibit the carriage of Coast Guard-certified flow-through treatment devices which have been secured so as to prevent such discharges. They also state that waters where a Coast Guard-certified marine sanitation device permitting discharge is allowed including coastal water estuaries, the Great Lakes and interconnected waterways, freshwater lakes and impoundments accessible through locks, and other flowing waters that are navigable interstate by vessels subject to this regulation (40 CFR 140.3)

LIMITED WARRANTY

Raritan Engineering Company warrants to the original purchaser that this product is free of defects in materials or work-manship for a period of one year from the product's date of purchase. Should this product prove defective by reason of improper workmanship and/or materials within the warranty period, Raritan shall, at its sole option, repair or replace the product.

- 1. TO OBTAIN WARRANTY SERVICE, Consumer must deliver the product prepaid, together with a detailed description of the problem, to Raritan at 530 Orange St., Millville, N.J. 08332. When requesting warranty service, purchaser must present a sales slip or other document which establishes proof of purchase. THE RETURN OF THE OWNER REGISTRATION CARD IS NOT A CONDITION PRECEDENT OF WARRANTY COVERAGE. However, please complete and return the owner Registration Card so that Raritan can contact you should a question of safety arise which could affect you.
- 2. THIS WARRANTY DOES NOT COVER defects caused by modifications, alterations, repairs or service of this product by anyone other than Raritan; defects in materials or workmanship supplied by others in the process of installation of this product; defects caused by installation of this product other than in accordance with the manufacturer's recommended installation instructions or standard industry procedures; physical abuse to, or misuse of, this product. This warranty also does not cover damages to equipment caused by fire, flood, external water, excessive corrosion or Act of God.
- 3. ANY EXPRESS WARRANTY NOT PROVIDED HEREIN, AND ANY REMEDY FOR BREACH OF CONTRACT WHICH BUT FOR THIS PROVISION MIGHT ARISE BY IMPLICATION OR OPERATION OF LAW, IS HEREBY EXCLUDED AND DISCLAIMED. ALL IMPLIED WARRANTIES SUCH AS THOSE OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE, IF APPLICABLE, AS WELL AS ANY IMPLIED WARRANTIES WHICH MIGHT ARISE BY IMPLICATION OF LAW, ARE EXPRESSLY LIMITED TO A TERM OF ONE YEAR. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG A LIMITED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
- 4. UNDER NO CIRCUMSTANCES SHALL RARITAN BE LIABLE TO PURCHASER OR ANY OTHER PERSONS FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES, WHETHER ARISING OUT OF BREACH OF WARRANTY, BREACH OF CONTRACT, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
- 5. No other person or entity is authorized to make any express warranty, promise or affirmation of fact or to assume any other liability on behalf of Raritan in connection with its products except as specifically set forth in this warranty.
- 6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



530 Orange Street, Millville, NJ 08332 USA

Telephone: 856-825-4900 FAX: 856-825-4409

www.raritaneng.com